MEFERI

ME6X Single Slot Cradle
Quick Start Guide

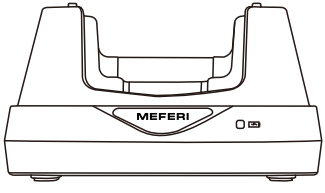

Overview

Front

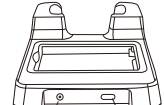

Back

Plastic insert

Charging mode

a) ME6X Charging:

Connect the 12V/2A charger to the DC interface located on the back of the single-slot cradle. Once connected, the MEFERI logo light will turn on. Insert the ME6X device into the cradle slot. The ME6X will now enter the charging state. The status indicator light on the device will appear red while charging and turn green when fully charged.

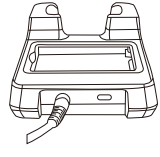

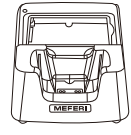

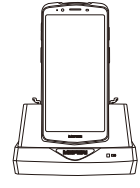

b) ME6X Charging With Protective Rubber Cover:

Connect the 12V/2A charger to the DC interface located on the back of the single-slot cradle. Once connected, the MEFERI logo light will turn on. Then remove the plastic insert from the charging station slot to enlarge the compartment and insert ME6X with a protective rubber cover into the cradle slot. The ME6X will now enter the charging state. The status indicator light on the device will appear red while charging and turn green when fully charged.

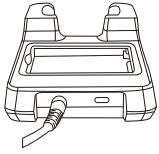

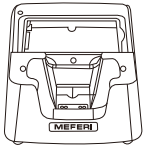

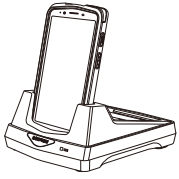

c) Battery Charging:

Connect the 12V/2A charger to the DC interface located on the back of the single-slot cradle. Once connected, the MEFERI logo light will turn on. Insert the battery into the additional compartment on the top of the cradle, ensuring proper alignment of the battery and charger contact connectors. The battery will now enter the charging state. During charging, the indicator light will appear red and turn green when the battery is fully charged. The battery can be charged independently or simultaneously with the ME6X device.

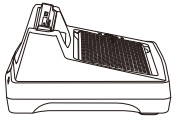

d) Communication mode:
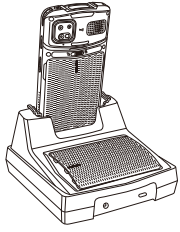
Connect the USB data cable to the Type-C interface located on the back of the single-slot cradle. Once connected, the MEFERI logo light on the cradle will illuminate. Whether the ME6X uses accessories such as the pistol grip or protective rubber cover, it can be charged and exchanged data with a PC by simply plugging it into the single slot cradle. It's important to note that during communication mode, the single-slot cradle cannot charge the battery.